

Setup: Netopia R5200/R5300 – Leased Line

Instructions for connecting your Netopia R5200/R5300 Router for your leased line account:

Prerequisites: Please run through the following flowchart to connect your equipment prior to scheduling your initial appointment with our Installations Group.

- Local Area Network (LAN) already setup
- TCP/IP configured on the individual workstations
- Circuit installed and tested - you will receive an “available” fax from us asking you to call for your installation appointment. Equipment should not be connected until this fax is received.

Your router has been shipped to you preconfigured. Please check the configuration print out to verify that your Serial IP address and the DLCI number for your connection has been included. Also, when the connection is up and running, don't forget to change the router password.

